

D120

ASSEMBLY INSTRUCTIONS

● REPLACEMENT PARTS

weider®

NN-1084

RECOMMENDED WEIGHT SET - 160LBS.

WEIDER HEALTH AND FITNESS

21100 ERWIN STREET, WOODLAND HILLS, CA., USA 91367

TABLE OF CONTENTS

	PAGE
DIAGRAM	1
PARTS LIST	2
REPAIR PARTS AND SERVICE	2
ASSEMBLY INSTRUCTIONS	3
STEP 1 FRAME ASSEMBLY	3
STEP 2 BACKREST PREPARATION	3
STEP 3 ATTACHING BACKREST AND SEAT	4
STEP 4 LEG CURL	4

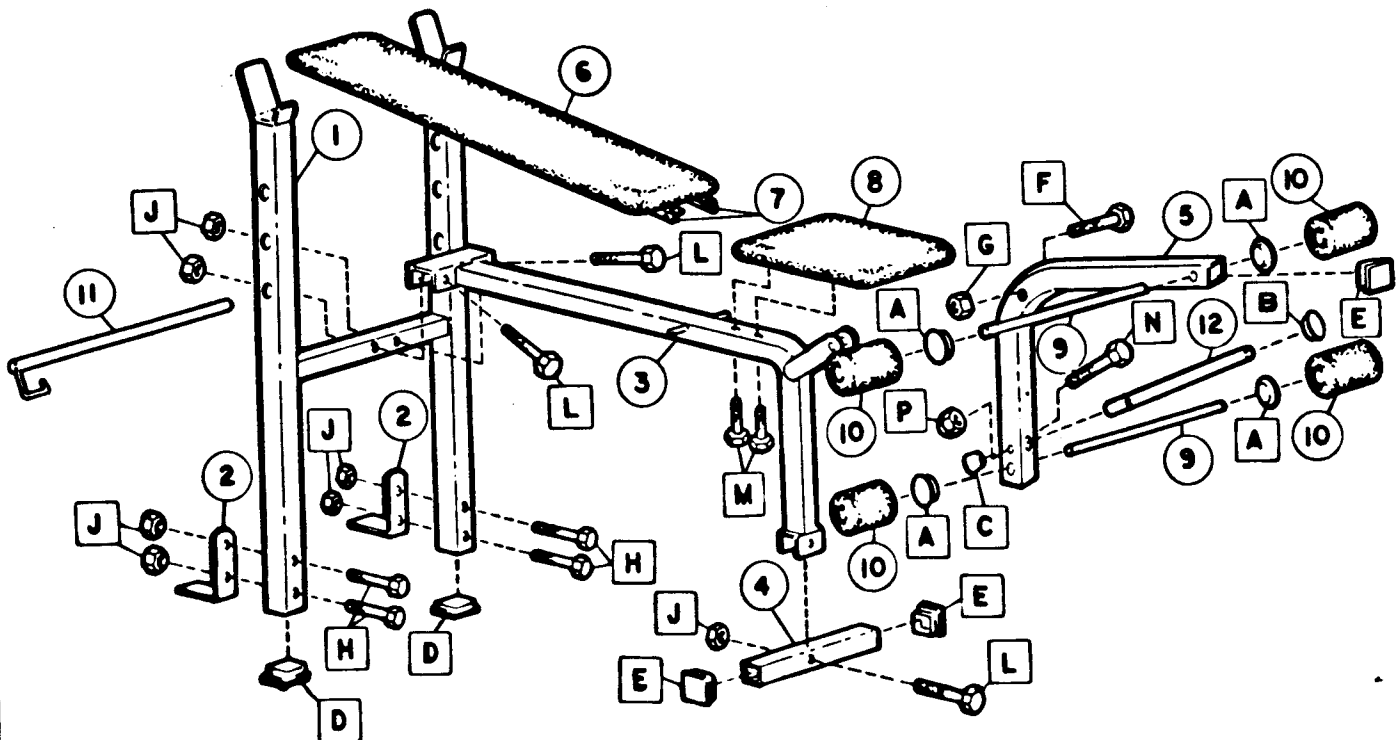


DIAGRAM NO.	PART NAME	NO. REQ.	ORDERING NO.
1	UPRIGHT	1	C0264-D04
2	L-BRACKET	2	C6125-A22
3	MAIN FRAME	1	C0154-D04
4	FRONT SUPPORT	1	C0156-D04
5	LEG CURL	1	C0155-D04
6	BACKREST	1	C0398-D04
7	LONG ANGLE IRON	2	C6118-A25
8	SEAT	1	C0355-C02
9	PAD BAR	2	C6136-C08
10	FOAM PAD	4	C0410-C02
11	BACKREST ADJ BAR	1	C6045-A05
12	WEIGHT PIN	1	C0148-C15
	HARDWARE BAG	1	C5822-D04
A	3/4" ROUND PLASTIC CAP	4	AA-8004
B	1" ROUND PLASTIC CAP	1	AA-8005
C	1" ROUND PLASTIC COVER CAP	1	AA-8070
D	1 1/2" SQUARE PLASTIC CAP	2	AA-8001
E	1 1/4" SQUARE PLASTIC CAP	3	AA-8069
F	3/8"-16 X 2 1/4" HEX HEAD BOLT	1	HH-5061
G	3/8"-16 LOCK NUT	1	HH-5013
H	5/16"-20 X 2" HEX HEAD BOLT	4	HH-5017
J	5/16"-20 LOCK NUT	7	HH-5021
K	*1/4"-20 X 3/4" MACHINE SCREW	4	HH-5022
L	5/16"-20 X 2 1/4" HEX HEAD BOLT	3	HH-5035
M	1/4"-20 X 1 1/2" MACHINE SCREW	2	HH-5250
N	5/16"-20 X 1 1/2" HEX HEAD BOLT	1	HH-5257
P	5/16"-20 ACORN NUT	1	HH-5019
	UPRIGHT DECAL	1	DE-4104
	INSTRUCTION MANUAL	1	CNN-1084
	EXERCISE CHART	1	CNN-1080
	*PRE-ASSEMBLED WITH SEAT & BACKREST		

REPAIR PARTS AND SERVICE

IMPORTANT

*BEFORE CALLING THE 800 NUMBER *

IN ORDER TO RECEIVE SERVICE ON THIS PRODUCT YOU WILL HAVE TO FIRST
SEND IN YOUR WARRANTY CARD

CUSTOMER SERVICE 1-800-225-0653

ALL OF THE PARTS FOR THE WEIGHTBENCH CAN BE ORDERED FROM WEIDER HEALTH AND FITNESS, PARTS SERVICE DEPT., 900 WEST ST. OLNEY, ILL. 62450. WHEN ORDERING, PARTS WILL BE SENT AND BILLED AT THE CURRENT PRICES. PRICES MAY BE SUBJECT TO CHANGE WITHOUT NOTICE. STANDARD HARDWARE ITEMS ARE AVAILABLE AT LOCAL HARDWARE STORES.

**TO OBTAIN PARTS DO NOT GO BACK TO THE STORE WHERE YOU
PURCHASED THIS UNIT.**

ALWAYS INCLUDE THE FOLLOWING INFORMATION WHEN ORDERING PARTS:

● MODEL NO. _____


● NAME OF PART _____

● ORDERING NUMBER _____

IMPORTANT NOTICE


BEFORE BEGINNING ASSEMBLY READ THE FOLLOWING

1. PLEASE READ THE INSTRUCTIONS CAREFULLY, PAYING PARTICULAR ATTENTION TO ALL WARNINGS, CAUTIONS, NOTES OR NOTICES. LAY OUT UNASSEMBLED PARTS; FAMILIARIZE YOURSELF WITH THE DRAWINGS THEN READ AND UNDERSTAND THE INSTRUCTIONS THOROUGHLY.
2. THIS PRODUCT MUST BE ASSEMBLED BY AN ADULT PRIOR TO USE.
3. DO NOT DESTROY THE PACKING AND CARTON UNTIL THE UNIT IS COMPLETELY ASSEMBLED.
4. DO NOT DESTROY THE INSTRUCTION MANUAL, USE IT FOR ORDERING REPLACEMENT PARTS.
5. RECOMMENDED TOOLS FOR PROPER ASSEMBLY ARE AS FOLLOWS: A HAMMER, PLIERS, MEDIUM SIZE FLATHEAD SCREWDRIVER, AND TWO 6" ADJUSTABLE WRENCHES.

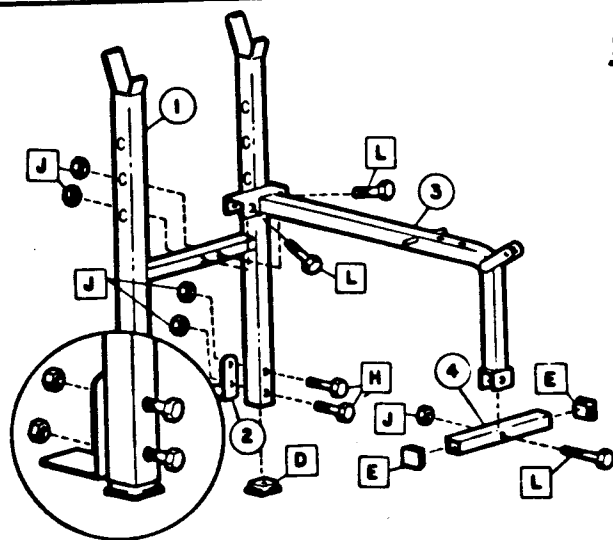

STEP 1 FRAME ASSEMBLY


Begin by inserting 2 SQUARE PLASTIC CAPS (D) into UPRIGHT (1). Align bolt holes on L-BRACKETS (2) with bolt holes on UPRIGHT (1). Secure each bracket with 2 HEX HEAD BOLTS (H) and 2 LOCK NUTS (J). Align u-bracket on MAIN FRAME (3) with hole in FRONT SUPPORT (4) and secure with HEX HEAD BOLT (L) and LOCK NUT (J). Lower rear u-bracket of MAIN FRAME (3) onto crossmember of UPRIGHT (1). Align bolt holes and secure with 2 HEX HEAD BOLTS (L) and 2 LOCK NUTS (J). Insert 2 SQUARE PLASTIC CAPS (E) into FRONT SUPPORT (4). Tighten all bolts!

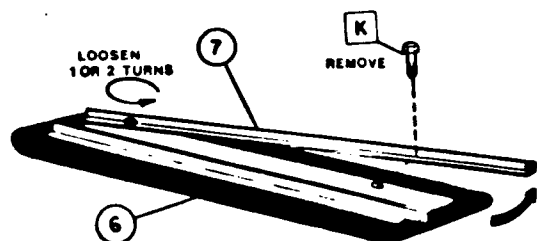

STEP 2 BACKREST PREPARATION

Note: The lower or attachment end of the BACKREST (6) can be identified quickly by the LONG ANGLE IRONS (7). The LONG ANGLE IRONS (7) will be extended approximately two inches beyond the BACKREST (6).


Turn BACKREST (6) over to expose work area. Both LONG ANGLE IRONS (7) have been fastened to BACKREST (6) for shipment. One Long Angle Iron must be loosened in order to assemble BACKREST (6) to main frame pivot rod. The lower MACHINE SCREW (K) must be removed while the upper MACHINE SCREW (K) is only loosened. The LONG ANGLE IRON (8) can now swing freely from the lower end of BACKREST (6).

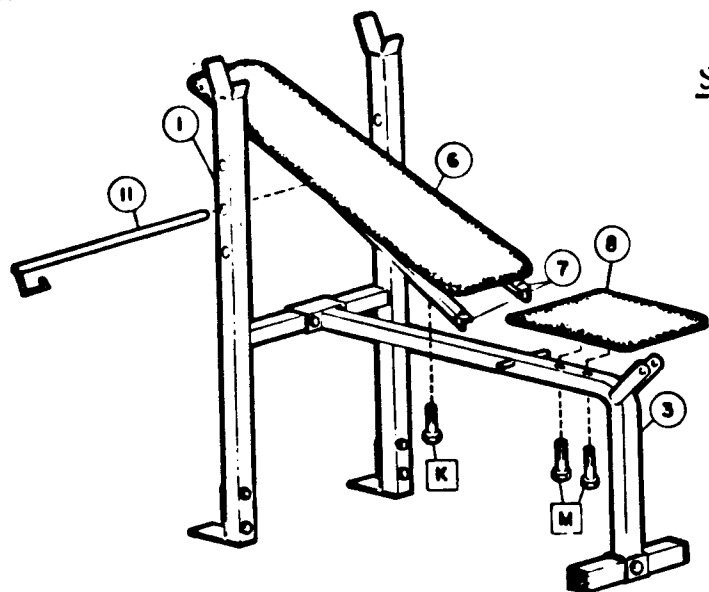

STEP 3 ATTACHING BACKREST & SEAT

BACKREST: To aid in attaching the Backrest, first slide the BACKREST ADJ. BAR (11) through one of the hole patterns in the UPRIGHTS (1). With LONG ANGLE IRON (7) free, lower BACKREST (6) to main frame pivot rod. Slide secured LONG ANGLE IRON (7) onto one side of pivot rod. Swing the free LONG ANGLE IRON (7) back to its original position and onto the opposite end of the pivot rod. See Detail A. Replace MACHINE SCREW (K) that was removed in Step 2 and tighten all machine screws.

SEAT: With SEAT (8) right-side up, lower to MAIN FRAME (3) bolt holes. Align holes with Seat and fasten with 2 MACHINE SCREWS (M).

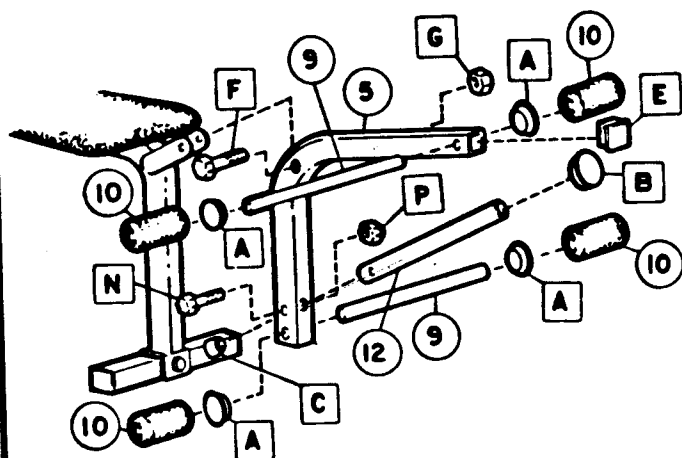

STEP 4 LEG CURL

First, slide WEIGHT PIN (12) thru angled holes on the front of LEG CURL (5). Align bolt holes and secure with HEX HEAD BOLT (N) and ACORN NUT (P). Place COVER CAP - 15 (C) over rear extended portion of WEIGHT PIN (12). Insert ROUND PLASTIC CAP (B) into end of WEIGHT PIN (12). Insert SQUARE PLASTIC CAP (E) into end of LEG CURL (5). Position LEG CURL (5) between leg

curl brackets on MAIN FRAME (3). Secure with HEX HEAD BOLT (F) and LOCK NUT (G). DO NOT OVER TIGHTEN! Repeat the following instructions until all remaining leg curl parts are in place. First, slide PAD BAR (9) thru proper hole in LEG CURL (5) until equal amounts of bar are on both sides. (To help with the following step, a small amount of liquid detergent should be applied to both ends of PAD BAR (9). This acts as a lubricant in assembling FOAM PADS (10) and also acts as an adhesive after it has dried.) Slide FOAM PAD (10) onto each end of PAD BAR (9). Insert ROUND PLASTIC CAPS (A) into each end of PAD BAR (9).